
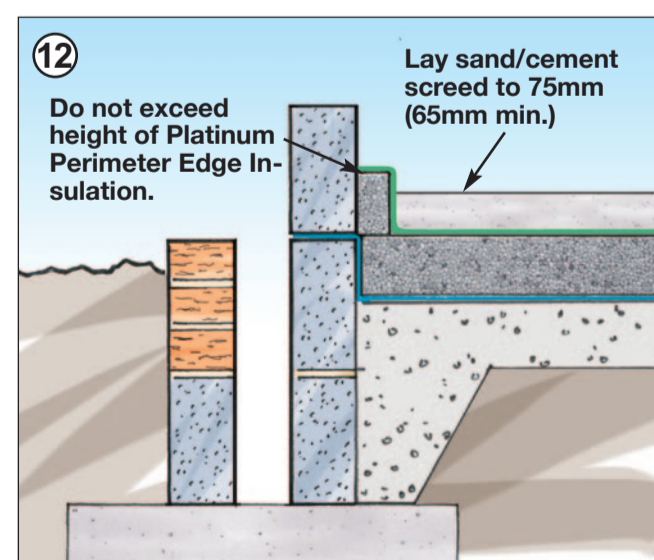
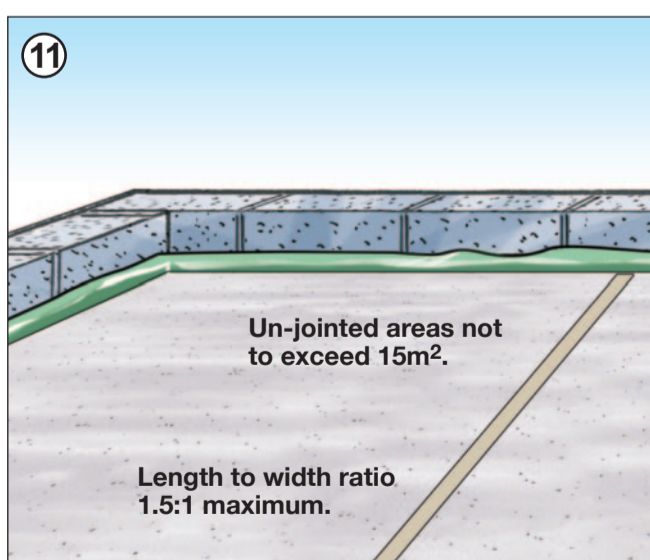
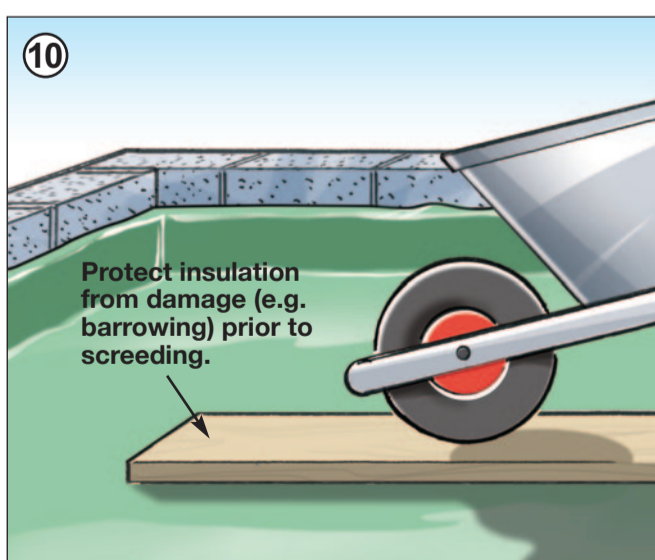
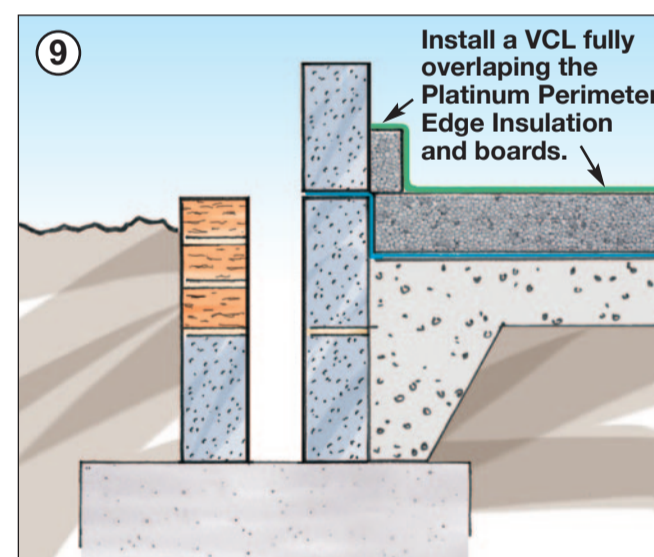
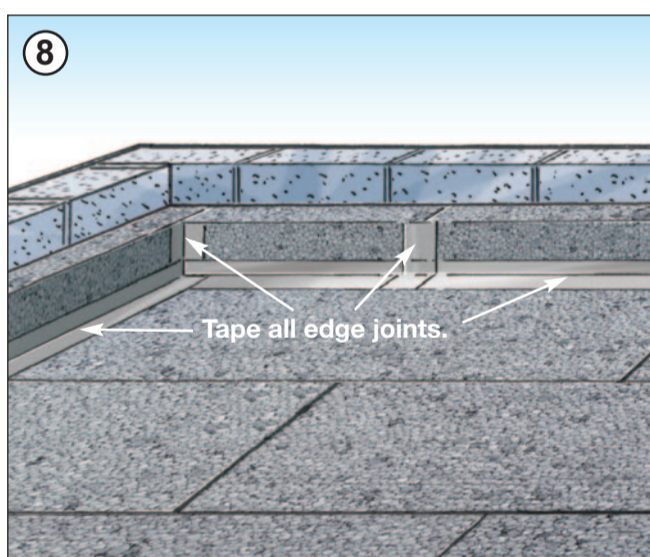
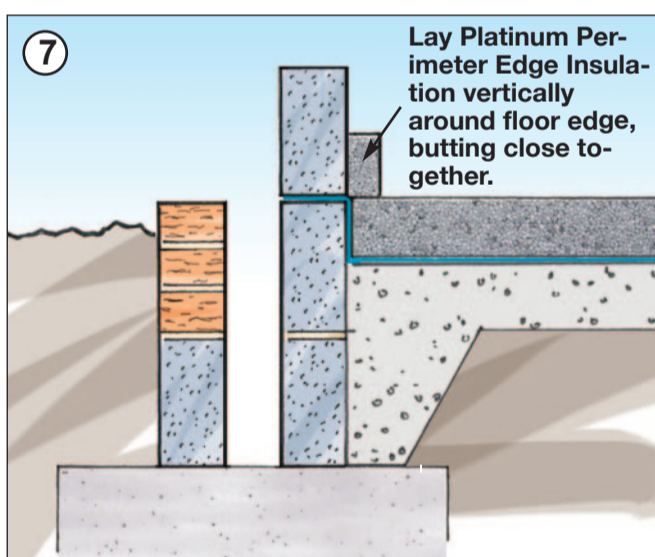
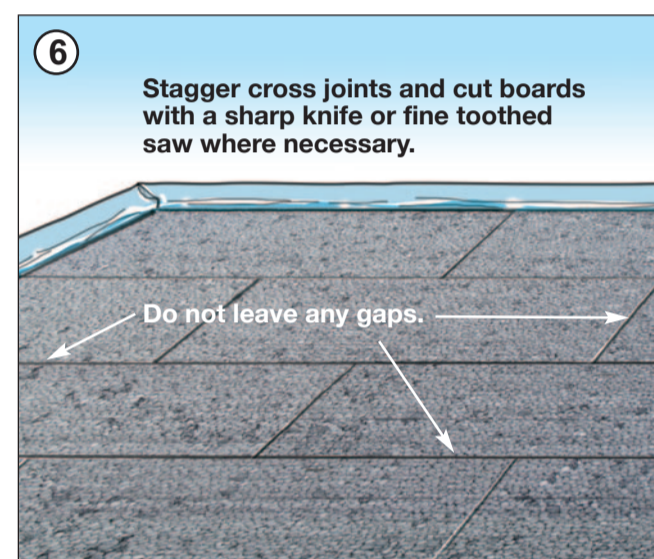
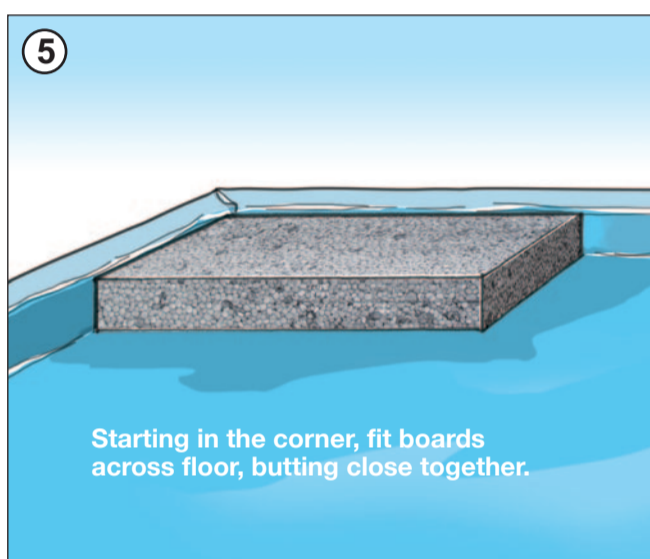
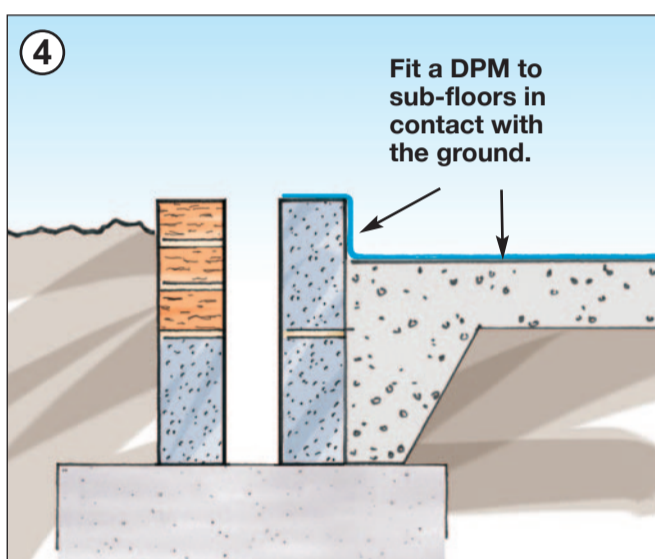
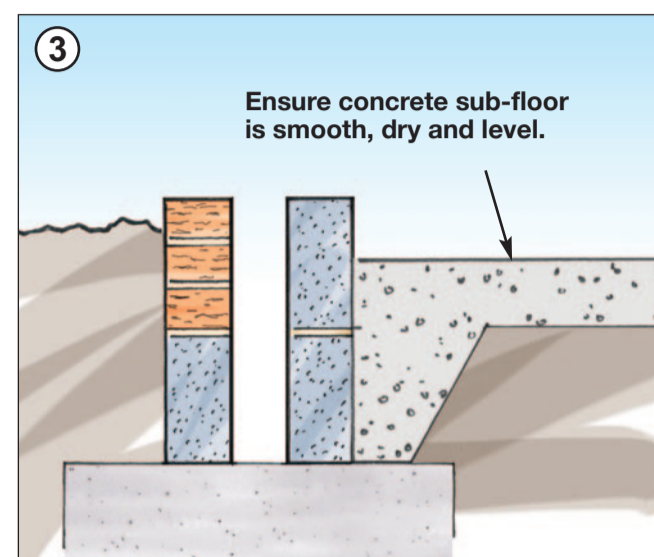
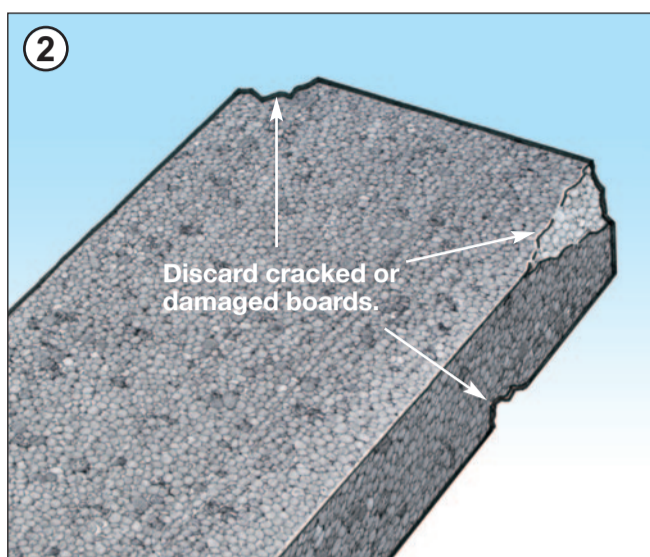


UNDER SCREED - INSTALLATION GUIDE

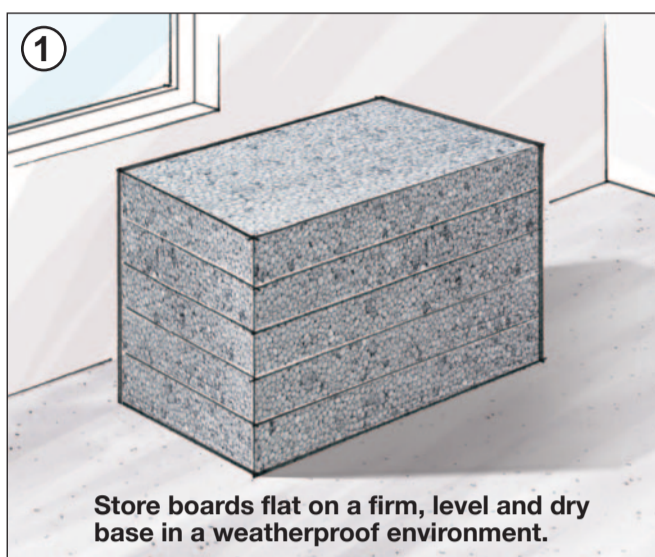

PRODUCTS REQUIRED-

- Platinum Ground Floor Insulation Boards
- Platinum Perimeter Edge Insulation

TOOLS REQUIRED-

- Sharp Knife
- Fine Toothed Saw



Visit our website for mobile friendly installation guides